 
 
 
**NF4046****Microwave oven****Instruction for use****TECHNICAL INFORMATION**

Outer dimensions	Height 308 mm Width 578 mm Depth 305 mm
Oven cavity	Height 213 mm Width 394 mm Depth 279 mm
Weight	21 kg
Volume	23 L
Voltage	220 V, single-phase, 50 Hz
Fuse	10 A, slow
Rating	1200 W
Microwave	650 W

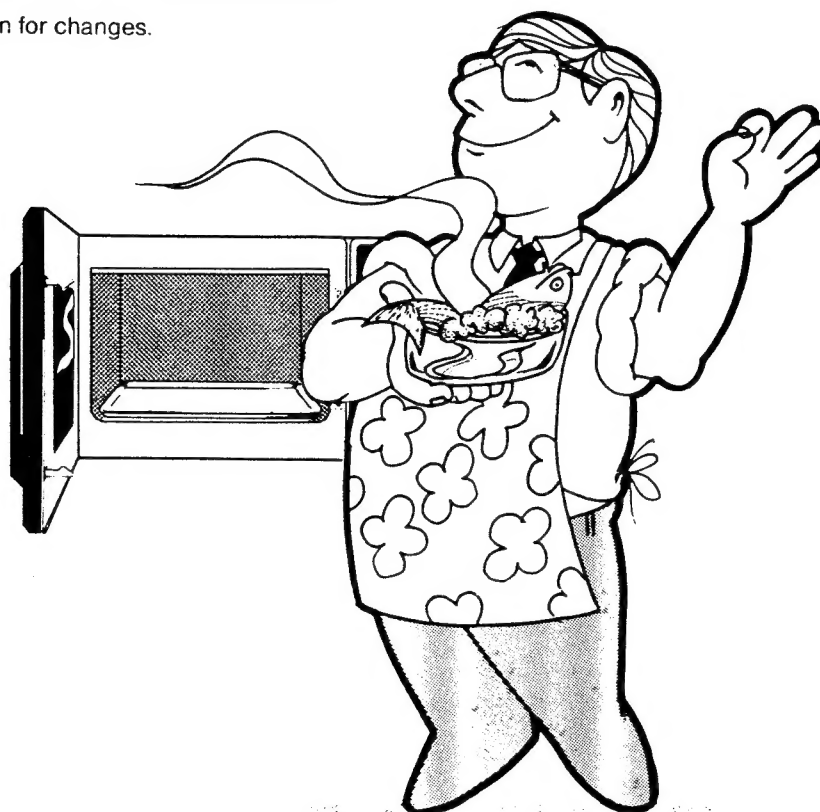

With reservation for changes.

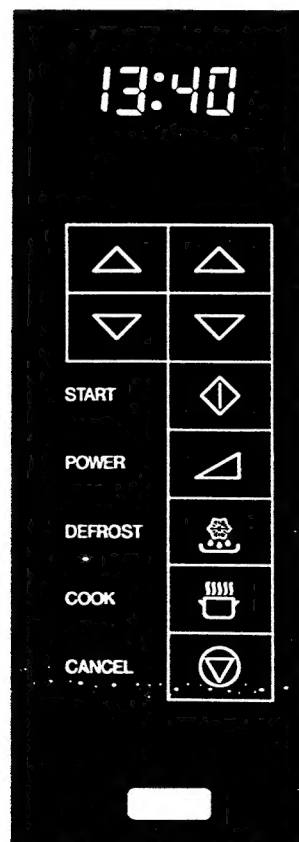

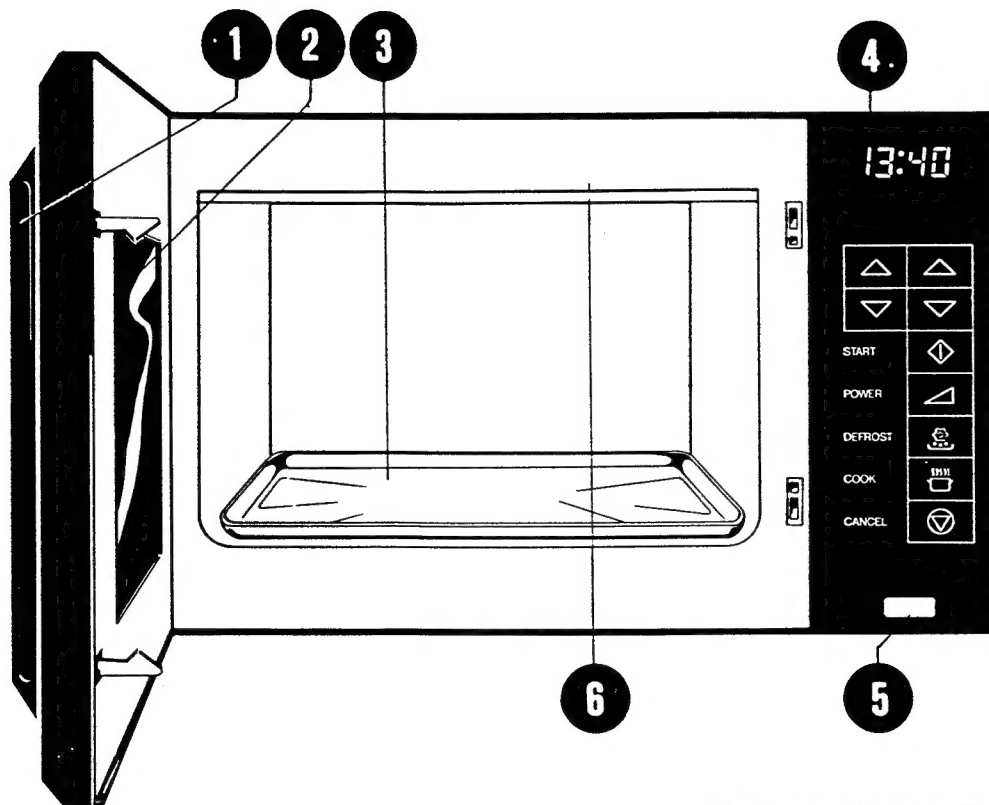

INSTALLATION

Check that the product is intact. The microwave oven must not be electrically connected if door, hinges or outer casing is defective. This also applies if there are damages or dents that suggest that the oven has been carelessly treated. Contact your supplier if the oven has been damaged. The air intake is placed under the oven and the feet must therefore not be removed. Connect the oven to an **earthed** socket with separate 10A slow fuse. As extra equipment you can buy a cabinet hang kit. In the installation instructions you will find the dimensions for measurements.

GET ACQUAINTED WITH YOUR MICROWAVE OVEN

1. **Oven door handle.** The oven will not operate unless the door is shut.
2. **See-through door** lets you check the cooking without interrupting it.
3. **Removable glass tray.** The glass tray should always be kept in place when operating the oven.
4. **Control panel** with touch-pad control.
5. **ON/OFF switch**
6. **Oven light**

MICROWAVE COOKING CONTROLS

Touch pads are sensitive to the touch of a finger. You will get a "Beep" response telling you your instruction has been registered into the control center.

ON/OFF bar

Push the narrow bar located at the bottom of the control panel to turn on the microwave oven. The light inside will come on. It is ready for your program. When cooking has finished push the bar again to turn the oven off. The ON/OFF bar does not start the flow of microwaves.

Cancel

Erases all settings except the clock.

COOK

When you want to cook, touch this pad and then the "up-arrow" on the right, to set the length of cooking time in seconds, touch the left arrow for minutes. The display window will show the settings in five-second and one-minute increments. The maximum time is 99 minutes and 99 seconds. The minutes appear to the left of the colon, the seconds to the right. Then touch the START. (Note: If you

are only entering a cook time (not defrosting also), then you don't need to touch the COOK button. A time entry is assumed to be for cooking).

DEFROST

Defrost is to be set in the same way as the cooking. First touch the DEFROST and then the "up-arrow" to set the desired defrost time. If you want to start cooking immediately after defrosting, touch COOK and then the "up-arrow" to set the length of cooking time. Between DEFROST and COOK there will be a HOLD-time for a length of time that equals the total defrosting time. During this time an indicator bar will flash.

GB

POWER

This pad lets you select the cooking power you want. Touch POWER and then the "up" -or "down-arrow". The power level moves in increments of "10%" and will be shown in the display window. You can change the power level up or down before or during the cooking process.

START

When program is set - touch this pad and the oven starts. If you open the door during cooking, all microwave energy stops. Close the door and touch START to continue.

Up-Down Arrows

Touch these arrows to set cooking times, defrosting times, power levels and to set the clock. To increase time, touch the "up-arrow"; to decrease touch the "down-arrow". The arrows on the right to set the cooking time in 5-seconds increments. The arrows on the right to set the minutes on the clock - the arrows on the left to set the hour on the clock. The power level can be set on both the arrows. Maximum time for operating is 99 minutes and 99 seconds. Times may be advanced by repeatedly pressing the arrows, or by holding them down. You can quickly enter a long time by using the down arrow to back up from 99.

Display Window

This window displays the time of day when you are not using the oven. When you set the cooking times, they will be displayed and then the "countdown" when the START pad is touched. The window also shows the selected power level when you touch POWER.

Indicators

Indicator bars will flash to show you what function the oven is in - i.e. "defrost", "hold", or "cook".

To set the CLOCK

Note! Make sure the oven switch is turned off. Touch the CANCEL-pad and then im-

mediately touch the "Up-arrow" on the right to set the minutes, the arrow on the left to set the hours. Touch START to activate the clock. The clock has 24 hours.

Step-by-step:

- 1-Push the ON/OFF bar and the light will come on**
- 2-Place food in the oven**
- 3-Close the door**
- 4-Set the time**
- 5-Set the power level if other than 100% (fast power)**
- 6-Push the START pad**
- 7-The microwave energy will turn off immediately when cooking time has elapsed, or when the oven door is opened.**

Remember:

* Never operate an empty microwave oven. If you want to practice working with the controls, place a glass of water in the oven.

* Never use the oven without the glass tray.

PRACTICAL HINTS

- Keep the oven clean - avoid spills or splatters and clean also under the glass shield and on the inside of the door.
- Use wide, preferably round or oval containers with lids.
- Do not use containers of metal or with metal decor.
- Cover the food during cooking. Use glass lids, plates or kitchen paper.
- Pastry items can be defrosted direct in bread baskets or on kitchen paper.
- If the food is heated in the frozen packages such as plastic bags, these should be opened. Packages containing metal parts or metal decor should never be used. Remove metal clips etc.
- Food products with peels or skin are to be pricked with a fork - i.e. potatoes and sausages.
- Place the largest and thickest places along the sides of the container and preferably cut the food in even pieces.
- Stirring and turning the food is a good method of obtaining more even heat distribution.
- The larger the quantity - the longer the cooking time.

- Use little or no water at all. Certain foods need some liquid however.
- Cut down on salt and spices since nothing of the taste will be lost in the cooking liquid. Salt absorbs water and can consequently influence the result.
- Don't cook the food too long. Excessive cooking gives an inferior result and the food easily becomes dry and tough. It is better to check and possibly cook a little more.
- The food should be allowed to stand for a certain time in order to complete the cooking process.
- **Never leave the oven unattended for any extended time.**
- Save this instruction guide and read it carefully.

MAINTENANCE

Clean away spills and splatters as soon as possible. Use a soft humid cloth and if necessary detergent. Clean also the door and the door list. Do not use detergent with corrosive or grinding effect.

SAFETY

The microwave oven has been tested and approved. The oven is fitted with approved safety switches and door seal to prevent microwave leakage. Do not use the oven with the door open and the safety switches put out of action. Never use the oven if it has been damaged, especially to the door, hinges or safety switches. Do not attempt to repair the oven, as incorrect repairs can lead to personal injury and malfunctions. Adjustments and repairs must be carried out by service-man trained and authorised by us. If the microwave oven is being used commercially in cafeterias, bars, etc. special regulations apply.

CHANGING THE BULB

Use a 25 W, E 14-base pear-shaped bulb. Press the main switch off.

Remove the cover on left side of the oven by loosening the screw.

SERVICE AND SPARE PARTS

can be ordered from your dealer. When ordering, specify product number and model designation which is found on the machine plate.

GUARANTEE

The oven is covered by a 1 year guarantee.

TECHNICAL INFORMATION

Outer dimensions	Height 308 mm Width 578 mm Depth 305 mm
Oven cavity	Height 213 mm Width 394 mm Depth 279 mm
Weight	21 kg
Volume	23 L
Voltage	220 V, single-phase, 50 Hz
Fuse	10 A, slow
Rating	1200 W
Microwave	650 W

With reservation for changes.

560T714P45